

TE/M6C RP
09/09
Ref. No. 71027
Made in China
Fabriqué en Chine

Trust

TOMY®

 


Classic


Baby Monitor • Écoute-bébé • Baby-Monitor • Babyphone
Monitor para Bebés • Baby Monitor • Радионяня
جهاز مراقبة الطفل الرضيع • Συσκευή παρακολούθησης μωρού • אינטרקום לתינוק

Instructions • Notice d'emploi
Gebruiksaanwijzing • Bedienungsanleitung
Manual de Instrucciones • Manuale d'uso
Инструкция по эксплуатации • كتيب الإرشادات
Εγχειρίδιο οδηγιών • מדריך למשתמש

PARENT UNIT

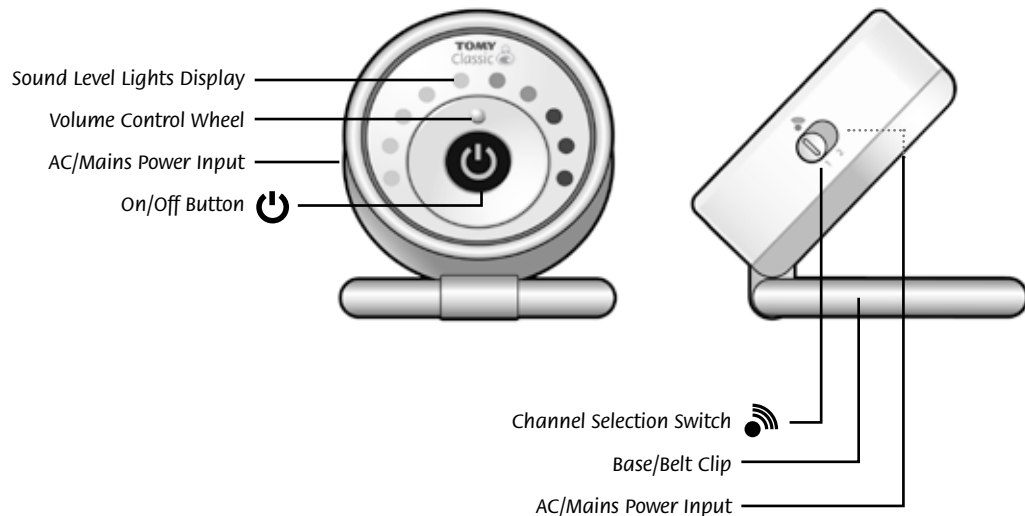

BABY UNIT

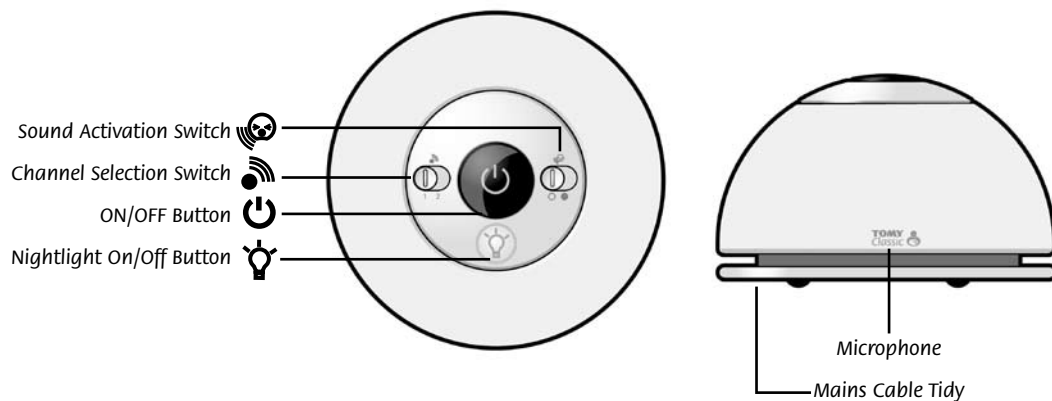 

• POWER ON

For best performance we recommend both units are operated using the mains adaptors supplied. Simply plug each adaptor into their respective units and then into a convenient mains outlet. Switch on the mains outlet and press the switch on both units to activate.

Place the Baby Unit at least 1 metre away from your baby ensuring all parts are kept out of reach. Under no circumstance should you place any parts of the monitor in or on a cot. For best performance we recommend that the monitor is placed no further away than 3 metres from your baby.

For portable Parent Unit monitoring, remove the battery compartment cover from the back of the unit and insert 3 x AAA/LR3 batteries (not supplied) ensuring correct polarity. Replace the cover and screw firmly in position.

• SELECTING A CHANNEL

Switch both Parent and Baby Units to channel 1. This need not be changed unless interference occurs. If interference occurs change the switch on BOTH Parent and Baby Units to channel 2. If further interference occurs refer to the 'Simple Solution Guide' within this booklet.

Important! Even if the two units are on different channels, it may still be possible for the Parent Unit to pick up signals from the Baby Unit if they are close together, so you may think both units are on the same channel. Always check to make sure both units are on the same channel.

• COMMUNICATION RANGE

Your monitor has been carefully designed to operate at its best within a 300 metre range suitable for the majority of household environments. The range and general quality of reception may vary depending on battery power and a number of obstructions such as walls, buildings etc.

• ALARM MODES

Identify the cause of audible alarm by using the following table; should you be unable to identify or rectify the cause of the problem, please refer to the Simple Solution Guide within the booklet.

Alarm tone on Parent Unit	Alarm Meaning	Indications on the Parent Unit
 (Continuous)	Loss of contact.	
 1 beep	Low Battery - Parent Unit	<ul style="list-style-type: none"> Button will change from green to flashing red.

• FEATURES AND FUNCTIONS

• VOLUME CONTROL


 
Adjust the volume from mute to max by moving the thumb wheel clockwise to increase or anti-clockwise to decrease.

• SOUND LEVEL LIGHTS DISPLAY

 
The Sound Level Lights Display on your Parent Unit reacts to the sounds of your baby. The louder your baby, the more lights illuminate on the display. You can lower the volume of the Parent Unit whilst still watching out for baby, ideal for when you're relaxing or entertaining.

- SOUND ACTIVATED MONITORING 

For those quiet moments or when your baby is a little older you may not want to hear every sound in your baby's room. Your Baby Monitor has a Sound Activated Monitoring mode, a feature that only captures sounds above a pre-set threshold, for example a cry rather than a gurgle.

Select Sound Activated Monitoring by sliding the  switch on your Baby Unit to . The Parent Unit will mute 15 seconds after your baby settles. Every time your baby's sounds rise above the threshold this feature will be interrupted instantly and normal sound monitoring will continue until your baby settles again.

- NIGHTLIGHT 




Your Baby Unit has a soft glow Nightlight that can be switched ON and OFF by pressing the  button on your Baby Unit. To use the Nightlight without monitoring, please refer to the 'Independent Nightlight' section below.

- BASE/BELT CLIP

Your monitor is supplied with a handy base that is ideal for positioning your monitor. The base can also be used to hang or wall mount your monitor or as a belt clip by turning it back upon itself.



 - INDEPENDENT NIGHTLIGHT 

As your baby grows older you can use the Nightlight without monitoring and without the need for the Parent Unit. With the Baby Unit switched OFF, press the  button and the Nightlight will illuminate. The  button will glow red (instead of the usual green), indicating that the monitor is not switched ON. Press the  button again to switch off.

- CARING FOR YOUR MONITOR

Do not immerse any parts in liquids. Do not place in direct sunlight. Periodically examine product for signs of damage to electrical parts and do not use until damage has been properly repaired. Always remove batteries from the Parent Unit if using the mains adaptor for long periods of time.

- GUARANTEE

We guarantee your monitor against manufacturing defects for 2 years from the date of purchase on production of a valid receipt. In the first instance of a manufacturing defect, we recommend that you return your monitor to its place of purchase. If this does not satisfactorily resolve your problem, for further advice please refer to; www.tomy.eu

IMPORTANT! Your monitor transmits over public airwaves. Interference may be caused or your conversation may be picked up by another product that operates on the same frequency. This is not a manufacturing defect and is therefore not covered by our warranty.

Full terms and conditions can be found on our website: www.tomy.eu

- TECHNICAL SPECIFICATIONS

- Power Supply: Mains adaptor rating: PRI: 230V~50Hz SEC: 9V == 200mA
- Batteries: Parent Unit – 3 x AAA (LR3) 1.5V
- Operating Range: 300m in optimum 'open field' conditions.
- Operating Temperature: 0 - 50°C
- Frequencies: 40.660~40.700MHZ

- SAFETY INFORMATION

The Tomy Baby Monitor is designed to help you monitor your child and is not a substitute for adult supervision. This product is not a toy. Your monitor transmits over public airwaves. Your conversation may be heard by another product that operates on the same frequency. Always keep electrically operated items and their cables out of reach of babies and younger children. Under no circumstances should you place any part of your monitor in or on a cot. Ensure all wiring is positioned safely so that children cannot become entangled and that no trip hazard is created. Under no circumstances should the adaptors supplied with this monitor be used with any other equipment. No other adaptors than those supplied should be used with your monitor. Be careful not to position the adaptor where a child is likely to use it as a step. Putting weight on the adaptor while it is plugged in could damage the unit or cause injury to your child. It is normal for chargers to become hot during use – take care when handling, allow heat to disperse. DO NOT COVER. Disconnect charger if the product will not be used for several days. To prevent a shock hazard, please disconnect from power supply before cleaning. Do not dispose in normal waste. Do not attempt to dismantle any part of this product.

- BATTERY SAFETY

Removal and replacement of batteries should be carried out by an adult or under adult supervision. Take special care to ensure batteries are inserted correctly, observing (+) and (-) polarity marks on battery and product. Do not short circuit the contacts in the battery compartment or the battery terminals. Remove exhausted batteries from product. Do not mix old (used) and new batteries or batteries of different types, e.g. rechargeable and alkaline or batteries of different makes/brands. Dispose of exhausted batteries safely, and never dispose of batteries in a fire. Remove batteries from product after use or if storing for long periods. Only use batteries of the same or equivalent type to those recommended.

Removal and recharging of rechargeable batteries should be carried out by an adult or under adult supervision. If you are using rechargeable batteries within the Parent Unit, they must be removed from the monitor before recharging. Do not attempt to recharge non-rechargeable batteries.



Help the environment by disposing of your product and packaging responsibly. The wheeled bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

- SIMPLE SOLUTION GUIDE

Should your monitor not be operating as expected, the information listed below should be adequate to resolve your problems; alternatively a more comprehensive guide can be found on our website: www.tomy.eu

- FREQUENTLY ASKED QUESTIONS

Q. Why do I still get interference even after I have changed channel?

 
 
 
A. This could be due to your local environment. Overhead power cables, local radio transmitters, tall buildings, similar monitoring/radio equipment operating in your local area may create interferences.

Q. My monitor does not have the adequate range?


A. This monitor is designed to have a range of approximately 300 metres in optimum (open field) conditions. Environmental obstructions such as overhead power cables, local radio transmitters, tall buildings etc. may reduce the range. For best performance we recommend operating your monitor using the mains adaptors supplied.

Q. Can I use my monitor abroad?

A. You can use your monitor in the country it was purchased and anywhere in the EU. Although your monitor may function correctly in other countries, its operating frequency may affect (or be affected by) other devices and could be illegal. Tomy cannot accept any liability for use outside of the country in which you purchased your monitor or the EU.

PROBLEM	POSSIBLE CAUSE	SOLUTION	PAGE
My Parent Unit will not switch ON.	Mains power is not connected correctly.	Check the power cable connections (including wall socket).	3
	Battery insertion and/or battery life issues.	Check the batteries have adequate charge and are correctly installed.	
My Baby Unit will not switch ON.	Mains power is not connected correctly.	Check the power cable connections (including wall socket).	3
The Nightlight is active but I cannot connect with the Parent Unit.	The Nightlight is being operated independently of the Baby Unit's monitoring function (which is an intended feature).	Switch the Nightlight OFF by pressing the  button then reactivate the Baby Unit's main function by pressing the  .	4
Parent Unit is making a high pitched (feedback) noise.	Parent and Baby Unit are too close.	Move the Parent Unit at least 10m / 30ft away from the Baby Unit.	3
		Lower the volume of the Parent Unit.	
There is a continuous beeping noise.	Loss of contact alarm.	Ensure both units are adequately powered.	3
		Bring both units closer together and repeat the 'Set-Up' instructions.	
My Parent Unit emits 1 beep every minute and the  button flashes RED.	Low battery Parent Unit.	Power the unit via the mains using the adaptors supplied.	3
		Replace the batteries.	
I cannot hear anything through my Parent Unit.	Volume on Parent Unit is set too low.	Increase Parent Unit volume.	3
	Units are out of range.	Move units closer.	
And/or: It's only intermittent.	Units are set to Sound Activated Monitoring mode.	Refer to Sound Activated Monitoring within this instruction booklet.	4
	The sound quality has decreased.	Bring the units closer together avoiding enviromental obstructions that maybe reducing your range.	3
And/or: is becoming intermittent.	The Parent Unit batteries are running low.	Power the unit via the mains using the adaptors supplied. Replace the Parent Unit batteries.	

UNITÉ PARENT

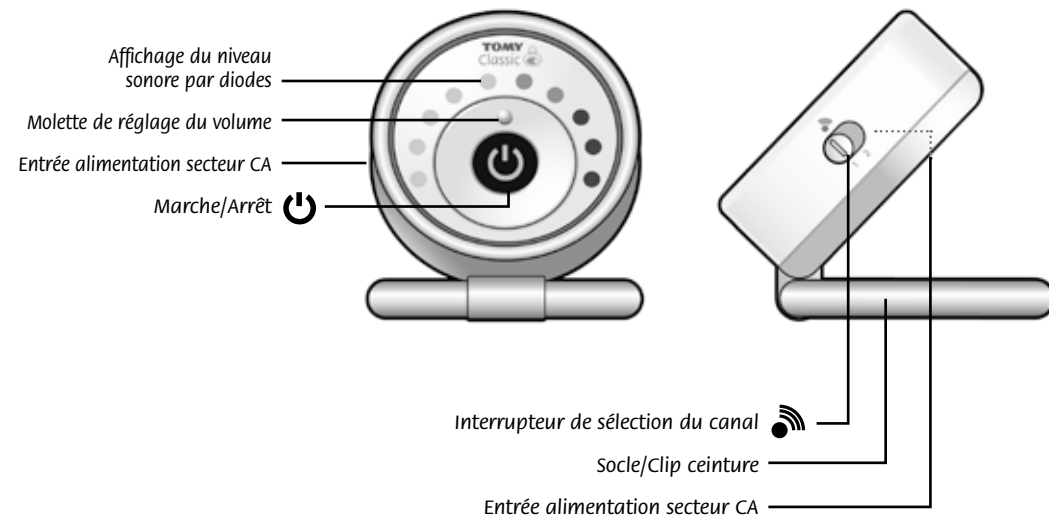

UNITÉ BÉBÉ

