



BigTel 280

**Bedienungs-
anleitung**

User manual

**Mode
d'emploi**



DE

GB

FR





Safety Information	2
Preparing the Telephone	5
Operating Elements	9
Preliminary Information	11
Telephoning	14
Other features	19
Call list / Redial	21
Phone book / Direct call keys	23
Setting the telephone	27
Answering machine	37
Registering/de-registering handsets	47
PBX / Supplementary Services	49
Appendix	50

Safety Information

Please read this operating instruction manual thoroughly.

Intended use


The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Installation location


Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Do not use the handset in potentially explosive areas.

Power adapter plug

 **Attention:** *Only use the power adapter plug supplied because other power supplies could damage the telephone. The socket outlet should be installed near the equipment and you should ensure access to the power adapter plug is not obstructed by furniture or such.*

Rechargeable batteries


 **Attention:** *Never throw batteries into a fire. Only use batteries of the same type. Pay attention to the correct polarity. Incorrect polarity of the batteries represents a risk of explosion during charging.*

Power failure

The telephone cannot be used to make calls in the event of a

power failure. Always keep a cord connected telephone which operates without an external power supply available in case of emergency situations.

Medical equipment

 **Attention:** *Never use the telephone in the vicinity of medical equipment. Effects on such equipment cannot be fully ruled out. It is recommended that if you have a pacemaker fitted you check with a medical expert or your health adviser before using this product.*

DECT¹ telephones can cause an unpleasant humming sound in hearing aids.

Earpiece Volume

Your telephone has an amplifying key, which amplifies the ear-piece volume significant if it is pressed. In the display “Boost On” is flashing. To switch off the activated amplification press the key again. “Boost On” disappears. The activated amplification will be switched off automatically whenever the present call is finished.

In the menu (Handset / Boost On -> On) you can switch on the amplification permanently. “BOOST ON” will replace the handset name on stand-by screen. By pressing the amplifying key you can switch off the amplification for the present call. For the next call it will be on again.

¹ DECT: **D**igital **E**nhanced **C**ordless **T**elecommunication = Standard for cordless telephones

Caution: This telephone is capable of producing very high volume levels when the amplification is turned on (amplification key + earpiece volume setting level 5 = +30 dB). Extreme caution should be taken if the handset is to be shared between users with normal hearing and those with hearing impairment.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of **electronic and electrical devices**, owners are obliged to dispose of old electronic and electrical devices in a separate waste container.



The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

Batteries represent a hazard to both health and the environment! Never open, damage or swallow batteries, nor allow them to get into the environment.




They may contain toxic and ecologically hazardous heavy metals. You are legally obliged to dispose of batteries at the point of sale or at appropriate collection points provided by your local public waste authorities. Disposal is free of charge. The adjacent symbols indicate that batteries must not be disposed of in normal domestic waste and but at authorised collection points.

Packaging materials must be disposed of according to local regulations.



Preparing the Telephone

Safety information

 **Attention:** *It is essential to read the Safety Information in Chapter 1 before starting up.*

Checking the package contents

The package contains:

Content	BigTel model			
	280	280-2 ¹	280-3 ¹	280-4 ¹
Base station with power adapter plug	1	1	1	1
Charging station with power adapter plug	-	1	2	3
Handset	1	2	3	4
Telephone connection cable	1	1	1	1
Rechargeable batteries	3	6	9	12
Operating instructions	1	1	1	1

¹ Visit www.amplicomms.eu to find out whether this telephone is available.



The power adapter plugs supplied fulfils the eco-design directive of the European Council (Directive 2005/32/EC).


This means that power consumption is considerably lower than power adapter plugs of an earlier design both in operating and idling modes.



Connecting the base station

! Attention: Position the base station at least 1 m away from other electronic devices, otherwise there is a risk of mutual disturbance.

Connect the base station as illustrated in the diagram. For reasons of safety, only use the power adapter plug and telephone connection line supplied.

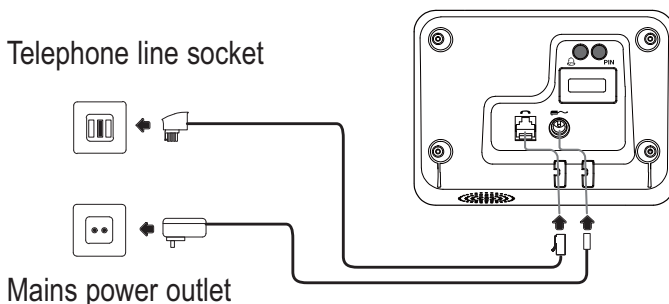

! Attention: Use only the power adapter plug supplied with the base station ! You should ensure access to the power adapter plug is not obstructed by furniture or such.


Connecting the charging station²

Connect the charging station to a mains power outlet.

! Attention: Use only the power adapter plug supplied with the charging station ! You should ensure access to the power adapter plug is not obstructed by furniture or such.

² Only applies to telephone sets with at least two handsets, see “Checking the package content“, page 5.

Inserting the batteries

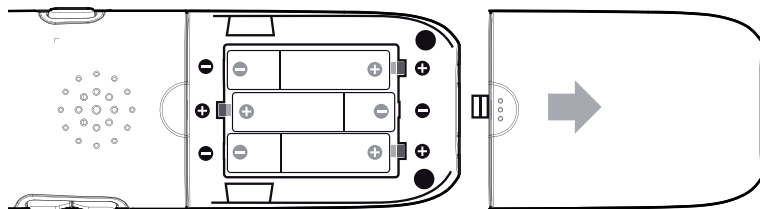

Open the battery compartment cover.


Put in the batteries.

Close the battery compartment cover.

⚠ Attention: Use only type AAA NiMH rechargeable batteries, 1.2 V, 600 mAh. Never use normal batteries / primary cell batteries. Observe the correct polarity!

Charging the batteries

👉 Before the handset is used for the first time, insert it in the base station / charging station for at least 16 hours.

The handset warms up during the charging process. This is normal and does not represent a risk. Use only the adapter plug unit provided for the charging station. The battery status is shown on the display. When the battery capacity is nearly exhausted, the battery symbol () will flash and “Battery Low“ will appear in the display).

You should now put the handset for charging into the base station or the charging station.

GB

Setting the time and date on the handset

At initial operation the handset does not have the correct time (e.g. for entries in the call list). The display shows “12:00” underneath the handset’s name.

Date and time are set through the menu item “Time / Date and Time”. In the case of mains failure these settings will be lost.


Setting the display language

The display language is available in different languages. The default setting is “German (Deutsch)”. Set the language using the menu item “Handset / Language” (“Mobilteil / Sprache”).


Auto Answer

If this function is activated, an incoming call is taken when the handset is removed from the base station. The automatic answering function is activated and deactivated using the menu item “Handset / Auto Talk”.

Operating Elements

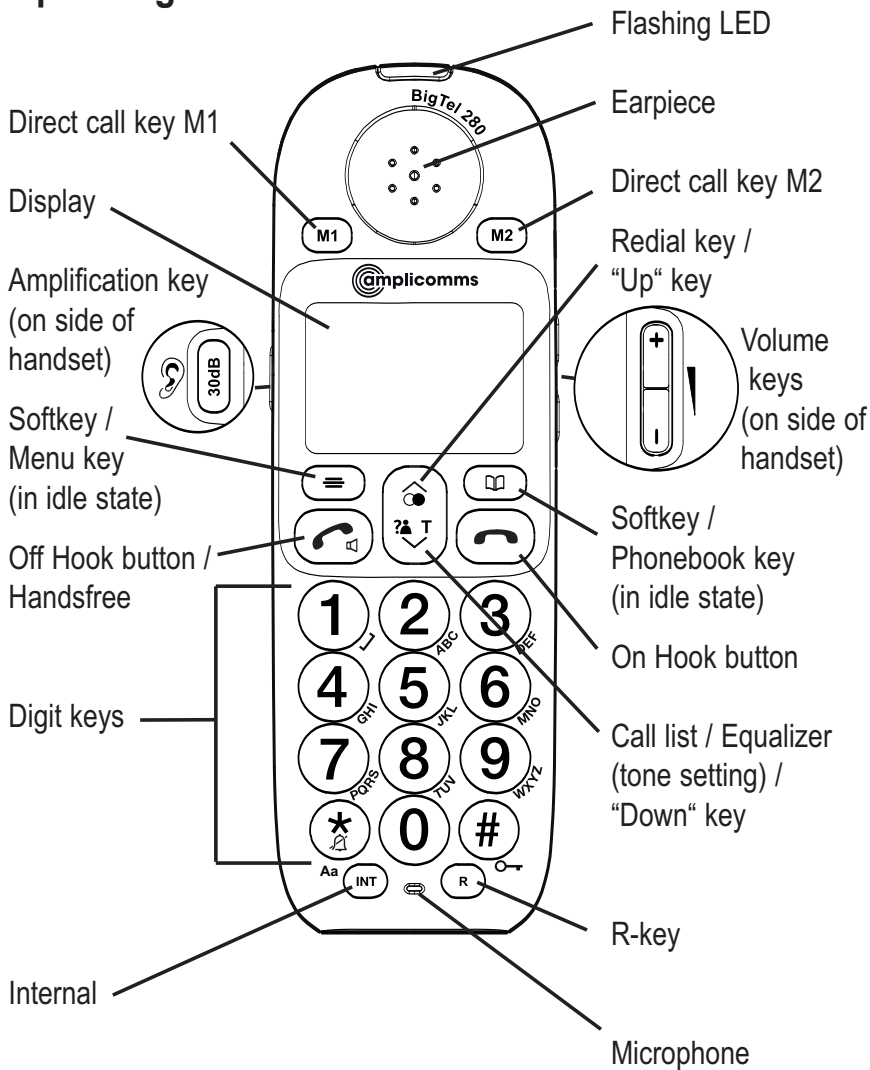

GB

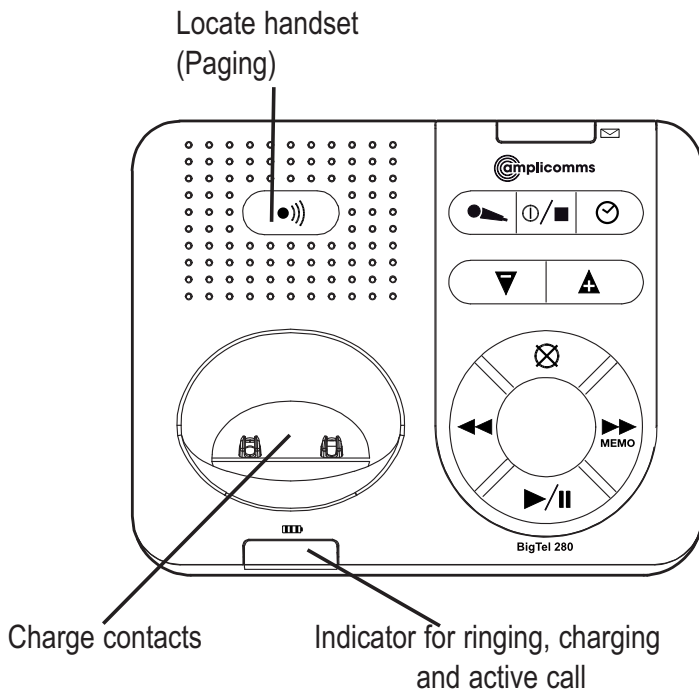







For details of the answering machine buttons refer to the chapter “Answering machine” on page 37.




Preliminary Information

This chapter provides basic information on using the operating instruction manual and the telephone.

Description of operating sequences in the manual


Display	Description
	Press the button depicted.
	Enter digits or letters.
	Handset rings.
	Base station rings.
	Remove the handset from the base station.
	Place the handset in the base station.
NAME?	Depicts text in the display.

Battery capacity (display)

Display	Description
	Batteries 100% charged
	Batteries approx. 50% charged
	Batteries need charging / Charge the batteries

During the charging of the battery the icon is animated.



Standby mode

All descriptions in this operating manual assume that the handset is in Standby mode. The system switches to Standby mode by pressing the button .

Navigating in the menu

All the functions can be accessed via the various menus. The entire menu structure can be found in the appendix.

The menu is opened in idle mode with the key .

Use the arrow keys  and  to move within the menu

Press the softkey under  to open a sub menu.

To return to the main menu press the softkey under .

Display icons



You are in an external call.



You are in an internal call.



Handsfree is activated.



The phonebook is open.



The keypad is locked.



The microphone is muted.



There are entries in the call list. In case of new calls the icon is flashing.



There's a new message in your voicebox (depending on your provider). Please contact your provider for information.



The handset ringer is set to "Off".



An alarm is set.



Steady on: handset within range of the base station.
Flashing: handset out of range.




The answering machine is switched on.

Telephoning


Taking a call

 Your phone is ringing.


If the handset is **not** in the base station:

 Press the Off Hook button. To activate Handsfree press the Off Hook button once again.

If the handset is in the base station and **Auto Talk** is **not** activated:


 Press the Off Hook button. To activate Handsfree press the Off Hook button once again.


If the handset is in the base station and **Auto Talk** is activated:

 Remove the handset from the base - the call will be taken automatically.

Making a call

 Enter the telephone number.

Delete wrong characters by pressing the softkey under  .

 The telephone number is being dialled.

 *You can also press the Off Hook button and you will hear the dialling tone.*

The entered number will be dialled immediately. It is not possible to correct wrong digits individually using this dialling procedure.

Ending a call



Press the On Hook button or replace the handset in the base station.

Redial

Your handset saves the last 10 dialled telephone numbers. If a caller is stored in your phone book, the name will be displayed.



Open the redial list.



Select an entry.



Press the Off Hook button.

Making a call from the call list

Your handset saves the numbers of the last 30 incoming calls in the call list. If a caller is stored in your phone book, the name will be displayed.

Saving can only take place if the function "Phone number transmission (CLIP)" is available at your connection and caller ID is not suppressed by the caller or was not transmitted for any other reason.



Open the call list.




Select an entry.



Press the Off Hook button.

Making a call from the phone book

 You can store up to 50 entries in the phone book.
For creating entries see section "Phone book", page 23.



Open the telephone book.




Select an entry.



Press the Off Hook button.

Making a call using the direct call keys

 Your phone provides two direct call keys M1 und M2. For storing and editing entries see section "Direct call keys", page 26.

M1 / M2

Press one of the direct call keys.



Press the Off Hook button.

Call timer


Your handset automatically times the duration of every call in minutes and seconds.

Muting the microphone

During a call you can switch your handset's microphone off.
Press the softkey under .

To unmute press the softkey under **Off**.

Internal calls

 *Internal calls, transfers and conference calls are only possible if multiple handsets are registered.*

Making an internal call



Press the **INT** key. Enter the internal number of the desired handset.

Transferring an external call to another handset



During an external call . . .


 
Press the **INT** key.

Enter the internal number of the desired handset.

The external call is put on hold. When the called handset answers you can announce the call transfer.



Press the On-Hook key. The call will be transferred.

 *If the called handset does not answer you will get back to the external call by pressing the  key.*

3-Party Conference



During an external call . . .

Press the **INT** key.

Enter the internal number of the desired handset.

Conf.

When the called handset answers press the softkey under **Conf.**

The 3-party conference is established.

If any handset hangs up during a conference call will leave the other handset still in connection with the external call.

External call during an internal connection

When you are on an internal call the base ringer will announce an incoming external call. In addition you will hear an attention tone in the earpiece.



Press the On-Hook key. The internal call will be ended.


The external call will be signalled.



Press the Off Hook key to take the external call.

Other features

Key lock

 The key lock prevents functions assigned to buttons being activated inadvertently. Incoming calls can still be taken in the normal way even when the key lock function is activated.



Press and hold down the #-key until **Keypad Locked** appears in the display.

Unlock 

For unlocking the keypad again press the softkey under **Unlock** and subsequently the #-key briefly. **Keypad Unlocked** appears in the display.

Switching the handset ringer on/off

 You can turn off the ringer via the menu item “Handset / Ringer Volume” as well.




Press and hold down the star-key until **Ringer Off** appears in the display.



For turning the ringer on again press and hold down the star-key until **Ringer Off** disappears.

Muting the handset ringer for an incoming call

 In case of an incoming call you can mute the handset ringer. Nevertheless, you will be able to take the call as long as the caller did not hang up.

Silent

Press the softkey under **Silent**.



GB

Setting the earpiece/loudspeaker volume

During a call you can adjust the volume in 5 levels using the volume keys on the side of the handset (if telephoning “normally” -> earpiece volume, with hands-free -> loudspeaker volume). These separate settings will remain at the last selected level when you end the call.

In addition you can increase the earpiece volume during a call by pressing the amplification key; **please refer to the note on page 3.**

Equalizer (changing of the frequency spectrum)

 During a call, you can change the sound of the handset in three stages by pressing . The display shows the respective characteristics. The setting will be retained for further talks until it is changed again.



Press the shown key during a call.

Select a setting.

Equalizer 1 = Reduced bass and enhanced treble.

Equalizer 2 = Flat – no increase or decrease in bass or treble frequencies.

Equalizer 3 = Increased bass and reduced treble.



Press the phonebook key to save the setting and proceed your call.

Call list / Redial

Editing the call list



Open the call list.



Select an entry. Date and time of the respective call are shown. If the caller's number is stored in the phonebook, the name will be shown in addition.

Option

Press the softkey under **Option**.



Select one of the following options and press the softkey under .

Save Number

The telephone number will be stored in the phone book. Enter a name, confirm or edit the telephone number and select a melody for the entry.

Save to M1/M2

The telephone number will be stored to the direct call key M1 or M2. Enter a name, confirm or edit the telephone number and select a melody for the entry.

Delete

The entry will be deleted immediately.

Delete All

The complete list will be deleted after a confirmation query.

Editing the redial list



Open the redial list.



Select an entry. If the caller's number is stored in the phonebook, the name will be shown in addition.

Option

Press the softkey under **Option**.



Select one of the following options and press the softkey under .

Save Number

The telephone number will be stored in the phone book. Enter a name, confirm or edit the telephone number and select a melody for the entry.

Save to M1/M2

The telephone number will be stored to the direct call key M1 or M2. Enter a name, confirm or edit the telephone number and select a melody for the entry.


Delete

The entry will be deleted immediately.

Delete All

The complete list will be deleted after a confirmation query.

Phone book / Direct call keys

 Your phone can store up to 50 private phonebook entries with names and numbers. You can assign each entry to a group. These groups can signal incoming calls with different melodies. Always enter the phone numbers with the area code; this enables a correct display of the respective caller for whom there is an existing entry and whose phone number transmission to your connection is available.

Creating a new entry



Press the phone book key.

Empty telephone book: **Phonebook Empty** is shown. After pressing the softkey under **Option** the display shows **New Entry**.

Option

If there are entries: the first entry is shown.



Press the softkey under **Option**.

Confirm **New Entry** with the softkey under




Enter the name (max. 16 digits).

Letters are also imprinted on the digit keys.

Letters, digits and special characters are entered by pressing the relevant key the respective number of times. You can delete the last character with the softkey under



<C. Use  to switch to capitals and back again. After a short time the cursor skips one position forwards.

Save

After having entered the name press the softkey under **Save**.

GB



Enter the telephone number (max. 24 digits). If your telephone is connected to a PBX start the telephone number with the access code. If a dialling pause is needed, press after the access code the **0** key for approx. 2 sec. A **P** appears in the display.

Save

After having entered the telephone number press the softkey under **Save**.



Save

Select a melody for this entry.

Having done this press the softkey under

Save.



Back to standby mode.

Editing telephone book entries



Press the phone book key.



Select an entry.

Option

Press the softkey under **Option**.




Select one of the following options and press the softkey under .

New Entry

You can create a new entry.

Edit Entry

You can edit the entry. Use the softkey under  to delete characters and numbers then add new characters and numbers as required. Please refer to "Creating a new entry".

Show Details





The entry is shown.




Delete Entry

The entry will be deleted.

Delete All

The complete list will be deleted after a confirmation query.

- Copy Entry** The entry is being copied to another suitable registered handset. All registered handsets will be shown. Select the desired handset using the arrow keys  and  and press the softkey under . Press the softkey under  on the respective handset to allow the operation.
- Copy All** All entries will be copied to another suitable handset. By this all entries on the other handset will be deleted.
- Copy Append** All entries will be added to the other suitable handset's phonebook.

 You can enter the first letter of the desired name using the alphanumeric keypad. The first matching entry is shown. Scroll to the desired entry using the arrow keys  and .

Editing the direct call keys

M1 / M2

Press one of the direct call keys.


Option

Press the softkey under **Option**.




Select one of the following options and press the softkey under .

Edit Entry

You can edit the entry. Use the softkey under  to delete characters and numbers then add new characters and numbers as required. Please refer to “Creating a new entry” on page 23.


Delete Entry

The entry will be deleted.


 If “Empty” is shown after pressing a direct call key select “Edit Entry” for creating a new entry.

Setting the telephone

Date/Time

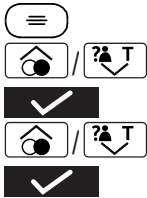

Press the **Menu** key.

Select **Time** and press the softkey under .


Select **Date and Time** and press the softkey under .

Enter step by step the year, the month, the day, the hour and the minute using the digit keys and confirm each with the softkey under


 **Save** .

 *In case of mains failure this setting will be deleted.*


Time format

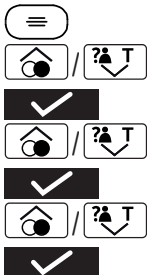


Press the **Menu** key.

Select **Time** and press the softkey under .


Select **Set Time Format** and press the softkey under .

Select **12Hour** or **24Hour** and press the softkey under .

Alarm

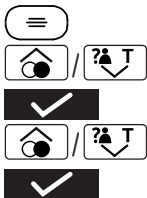

Press the **Menu** key.

Select **Time** and press the softkey under .

Select **Set Alarm** and press the softkey under .



Select one of the following options and confirm with the softkey under **Save**.

Once

Enter the alarm time using the digit keys and select a melody. The alarm is given once at the specified time.

Every Day

The alarm is repeated daily at the specified time. For details for setting refer to “Once”.

Mon to Fri

The alarm is repeated from monday to friday at the specified time. For details for setting refer to “Once”.

Off

Alarm is set to off.

To confirm the alarm signal, press the softkey under **Stop**. Pressing the softkey under **Zzz..** activates the snooze function. With this function the alarm is repeated up to five times after every 5 minutes before it is switched off completely.

Setting the ringer for the handset



Press the **Menu** key.



Select **Handset** and press the softkey under **✓**.



Select **Ring Tone** and press the softkey under **✓**.



Select **External** or **Internal** and press the softkey under **✓**.



Select a melody and confirm with the softkey under **Save**.

Handset ringer volume



Press the **Menu** key.



Select **Handset** and press



the softkey under **✓**.



Select **Ringer Volume** and press



the softkey under **✓**.



Select the desired volume and press the soft-

key under **Save**.

When the handset is on the base, the base will not ring during an incoming call. So when the handset ring volume is turned off and the handset is inside the base, your phone will not ring anymore.

Handset name



Press the **Menu** key.



Select **Handset** and press



the softkey under **✓**.




Select **Handset Name** and press




the softkey under **✓**.

Use the softkey under **◀C** to delete characters. Enter a name using the digit keys and confirm with the softkey under **Save**.


Keypad beep

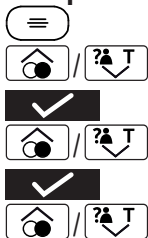


Press the **Menu** key.

Select **Handset** and press the softkey under .


Select **Keypad Beep** and press the softkey under .

Select **On** or **Off** and press the softkey under .


Display contrast

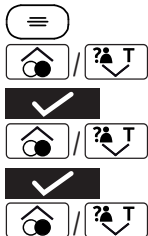


Press the **Menu** key.

Select **Handset** and press the softkey under .


Select **Contrast** and press the softkey under .

Select the desired setting and press the softkey under .


Auto Answer

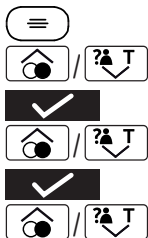


Press the **Menu** key.

Select **Handset** and press the softkey under .

Select **Auto Talk** and press the softkey under .

Select **On** or **Off** and press the softkey under .

 *If **Auto Talk** is on an incoming call will immediately be taken when the handset is taken from the base.*

Backlight Time



Press the **Menu** key.



Select **Handset** and press



the softkey under .



Select **Backlight Time** and press



the softkey under .



Select the desired setting and press the soft-

key under .

Confirmation Beep



Press the **Menu** key.



Select **Handset** and press



the softkey under .



Select **Confirm Beep** and press



the softkey under .



Select **On** or **Off** and press the softkey under



For every kind of setting, a long beep is generated to alert user the setting saved.

Selecting the base station

If your handset is subscribed to several base stations you can select a base station to operate with the handset ("Manual"). When "Auto" is activated, the handset will automatically choose the closest base unit in standby. During a call there will be no changing of the base station.

GB



Press the **Menu** key.




Select **Handset** and press




the softkey under .


Select **Select Base** and press

the softkey under .

Select **Auto** or **Manual** and confirm with the softkey under .

If you choose **Manual** select one of the base stations from the list and press the softkey under .

Display language

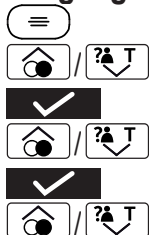

Press the **Menu** key.

Select **Handset** and press


the softkey under .

Select **Language** and press

the softkey under .

Select the desired language and press the softkey under .

Setting Boost on permanently

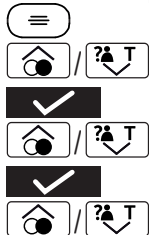


Press the **Menu** key.


Select **Handset** and press

the softkey under .

Select **Boost On** and press

the softkey under .

Select **On** or **Off** and press the softkey under .

 If **Boost On** is set to **ON** “**BOOST ON**” will replace the handset name on stand-by screen.

Setting the ringer for the base station



Press the **Menu** key.



Select **Base Settings** and press



the softkey under **✓**.



Select **Ring Tone** and press



the softkey under **✓**.



Select a melody and confirm with the softkey under **Save**.

Base ringer volume



Press the **Menu** key.



Select **Base Settings** and press



the softkey under **✓**.



Select **Ringer Volume** and press



the softkey under **✓**.



Select the desired volume and press the softkey under **Save**.

Dial mode



Press the **Menu** key.



Select **Base Settings** and press



the softkey under **✓**.



Select **Dial Mode** and press



the softkey under **✓**.



Select **Tone** or **Pulse** and confirm with the softkey under **Save**.

In most situations the "Tone" option should be selected.

Recall Time



Press the **Menu** key.



Select **Base Settings** and press the softkey under



Select **Recall** and press the softkey under



Select **Short** or **Long** and confirm with the softkey under **Save** .

In most situations “Short” (setting on delivery) should be selected. You won’t have to change anything.

Changing the PIN



Press the **Menu** key.



Select **Base Settings** and press the softkey under



Select **System PIN** and press the softkey under



Enter the relevant PIN (default 0 0 0 0) and press the softkey under



Enter the new PIN and press the softkey under




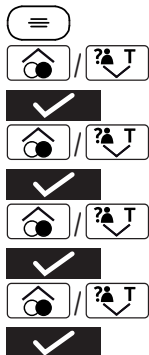
Enter the new PIN again and press the softkey under

The four digit PIN protects some settings against unauthorized changes.


If you have forgotten your PIN please call our service hotline.

Appointment


 You can set up to five appointments or reminders which you can give a name and an alarm by date and time.








Press the **Menu** key.


Select **Tools** and press the softkey under .


Select **Appointment** and press the softkey under .

Select an entry and press the softkey under .


Select **Edit** and press the softkey under .

Use the softkey under  to delete characters. Enter a name using the alphanumeric keys and confirm with the softkey under . Enter the date using the digit keys and confirm with the softkey under . Enter the time using the digit keys and confirm with the softkey under .

Select a melody and confirm with the softkey under .

 To delete an appointment select "Delete". The appointment will be deleted after a confirmation query.

Stopwatch

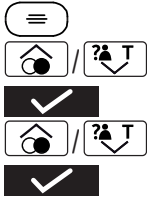


Press the **Menu** key.

Select **Tools** and press the softkey under **✓**.

Select **Stop Watch** and press the softkey under **✓**.

Press the softkey under **Start** to start the stop watch, **Stop** to stop it or **Reset** to set it back to "00:00".

Answering machine


The answering machine is operated on the base station. It supports you during operation and settings via voice prompts. You can select one of three different languages by long pressing the  key. i.e. German, French and English.

There are two modes possible:

- Outgoing message 1 = OGM and record (2 minutes per call)
- Outgoing message 2 = OGM only.


In delivery state two standard OGMs are recorded, which can be replaced with your own announcements (max. 2 minutes each).

Flashing: "New messages"

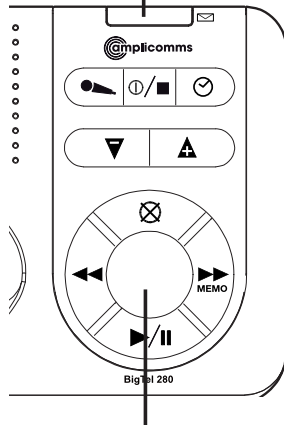



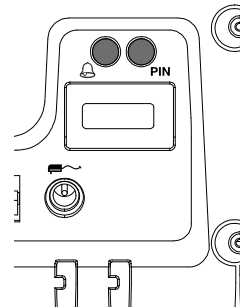


 




Number of messages
 Flashing: New messages
 Steady on: Old messages

Base station
 bottom



GB

Operating elements

Key	In standby		During playback
	Press briefly	Press > 2 sec.	
	Playback OGM	Record new OGM	
			Skip back
	Playback		Pause/resume
 MEMO		Record memo	Skip next
	Volume voice + ringer		Playback volume
	Answer.-mach. On/Off	Select OGM	
		Delete all mess.	Delete message or OGM
	Playback time settings	Set time	
 PIN	Playback VIP-Code	Set VIP-Code	
	Playback no. of ring tones	Set no. of ring tones	

LED display

Display dark	Answering machine off
00 ... xx	Flashing: number of new messages Steady on: number of old messages
HS	A handset is operating the answering machine
oo	OGM 2 is set, no record of incoming messages
FL	Memory full, the answering machine will automatically switch to OGM 2 without recording incoming messages. Delete old messages to get free memory space again.
- A	Incoming call or remote access.

Answering machine on/off / select OGM



Press to switch the answering machine on or off. When switching on you will hear an information about the selected OGM.

- **Outgoing message 1** = OGM and record (2 minutes per call)
- **Outgoing message 2** = OGM only



> 2 sec. To change the OGM (answering machine must be set to "On"), press and hold down for approx. 2 seconds. The OGM will be switched.

Playback messages on the handset

You can playback messages on the handset. If there are new messages, the display will show "New message(s)" and the number of new messages.

Playback new messages



Press the softkey under .

A voice prompt plays how many new messages are recorded. It then plays new messages from first recorded to last one by one. For more information in operating refer to the next chapter "Playback all messages".

Playback all messages



Press the menu key.



Select **Ans Machine** and press



the softkey under .




Select **Play New Msgs** or **Play All Msgs**



and press the softkey under .

A voice prompt plays how many messages are recorded. It then plays new messages from first recorded to last one by one.

If you want to hear the messages via the loudspeaker press .

To switch back press  again.





To skip to the next message during playback, press the softkey under .



To delete the current message during playback, press the softkey under **Delete**.

Call screening / Interception

Once the answering machine has taken a call you can listen to the caller.

Press . The answering machine continues recording.
If you want to intercept the call and speak to the caller, press . The answering machine will stop recording.

Playback messages on the base



Press .

The messages are played one at a time. If there are new messages, only the new messages (those that have not been heard) are played.



During playback, you can:




- go to the beginning of the current message.



- skip back to previous message (press twice).



- stop playback.

- interrupt playback, for restart playback press  once again.




- skip forward to next message.

Deleting messages on the base

During playback




Press and hold down  for approx. 2 seconds. The current message will be deleted.

Deleting all old messages

Only old messages (already heard) are deleted.




In standby press and hold down  for approx. 2 seconds. The display shows **dL**. All old messages are deleted.


Outgoing message (OGM)

Playback / delete current outgoing message



Press  briefly. The answering machine will playback the current OGM.



Stop playback with .

Press and hold down  for approx. 2 seconds to delete the OGM (you will hear a voice prompt). The standard OGM cannot be deleted.

Recording a personal OGM

Select an OGM you want to replace (refer to “Answering machine on/off / select OGM”, page 39).



 > 2 sec. Press and hold down  for approx. 2 seconds. Follow the spoken user interface.


To stop the recording press .

The answering machine will playback the recorded OGM.

Recording a memo

You can record memos for other users. These memos are considered an incoming message that can be picked up later by the user. The max. recording time for a memo is 2 minutes.



> 2 sec. Press and hold down  for approx. 2 seconds. Speak your memo.


To stop the recording press .

Answer delay settings

Select the delay for answering the call: select 2...9 rings or "Toll saver". If "Toll saver" is set, a call will be taken after 5 rings, if no new messages are available. If new messages are available, the answering machine will answer after two rings. Therefore you can check remotely whether or not new messages are available without having to make a connection.


Checking the answer delay setting



Press  on the bottom of the base briefly. The current setting will be announced.

Changing the answer delay setting



> 2 sec Press and hold down  on the bottom of the base for approx. 2 seconds. The current setting will be announced.

Change the setting with the keys  /



and press  briefly

to store the settings. The new setting will be announced.


If you do not press any keys for 10 seconds, the machine will revert back to the answering machine menu, without changing the settings. If there is a loss of power in the base, the number of rings will revert to 3 rings again.

VIP Code settings

The VIP Code is a 3-digit code used to operate the machine remotely (refer to “Remote Operation”). The VIP Code is set to '0 0 0' by default.


Checking the VIP Code






Press  on the bottom of the base briefly. The current setting will be announced.

Changing the VIP Code



> 2 sec Press  on the bottom of the base for approx. 2 seconds. The current setting will be announced.

Change the setting digit by digit with the keys  /  and press  briefly for storing and skipping to the next digit. The new setting will be announced.



If you do not press any keys for 10 seconds, the machine will revert back to the answering machine menu, without changing the settings. If there is a loss of power in the base, the VIP Code will revert to '0 0 0' again.



Clock setting

After the system clock set by user (see page 27), all recorded messages will then be stamped with date and time. When playing the message, the answering machine will announce day of week and time in front of the recorded message.



You can also enter time and day with the following procedure. If there is a loss of power in the base, the settings will be lost.

Setting time and day



 > 2 sec Press and hold down  for approx. 2 seconds. The current day will be announced.



 /  Use the buttons depicted to set the current day (will be voice prompted).

 Press  briefly.

 /  Use the buttons depicted to set the current hour (will be voice prompted).

 Press  briefly.

 /  Use the buttons depicted to set the current minute (will be voice prompted).

 Press  briefly.
The answering machine plays the current day of week and time.

Remote operation

The answering machine can be operated remotely using a tone-dialling (DTMF) telephone.

1. Dial your own telephone number.
2. If the answering machine is set to on it will answer after the preset delay. If the answering machine is set to off, it will answer after 20 rings with OGM 2.
3. Wait for the end of the announcement and then press the star key 2 times. You will hear a beep.
4. Slowly enter the VIP code (default "0 0 0").
5. You will hear two short beeps for confirmation.
6. Follow the spoken information for using the remote access.

2 Playback messages

- 2 Interrupt playback / restart playback
- 3 Skip forward to next message
- 1 1 Skip back to previous message
- 1 Repeat the current message
- 6 Stop playback
- 7 Delete current message

0 Delete all old messages

4 Playback current OGM

9 Turn on answering machine / Toggle between "Answer and Record" mode and "Answer Only" mode

- 5 Record new OGM
- 6 Stop recording
- 8 Turn off answering machine
- 6 Stop remote operation.

Registering/de-registering handsets

Five handsets can be registered to a base station. The handsets delivered with your telephone are already registered. Each handset can be registered to four base stations. To register a "foreign" handset please refer to it's user manual.

Registering a handset of the same type



Press the **Menu** key.



Select **Handset** and press the softkey under



Select **Registration** and press the softkey under



Select **Register** and press the softkey under



Select a number for the base station (1 - 4) and press the softkey under



Enter the relevant PIN for the base and press the softkey under



The new handset prompts "Press & Hold Page Key On Base".



Press and hold down the paging key on the base station until the LED is flashing (approx. 10 sec).

After a few seconds the handset will be registered.

Deleting a handset



Press the **Menu** key.



Select **Handset** and press



the softkey under



Select **Registration** and press



the softkey under



Select **De-register** and press



the softkey under



Enter the relevant PIN for the base



and press the softkey under



Enter the internal number of the handset, that should be de-registered



and press the softkey under

You can only cancel subscription of another handset, not the handset you are using to do the remove procedure.



PBX / Supplementary Services

PBX

If the telephone is connected to a private branch exchange, functions such as transferring calls and automatic call back can be used via the R button.

Refer to the operating manual provided with your private branch exchange as to which Flash time must be set in order to use these functions. The sales outlet where you purchased the exchange can provide information as to whether the telephone will work properly with the exchange.

Please remember to enter the access code and a necessary dialling pause (longpress "0") when creating phone book entries.


Supplementary services

Your telephone supports supplementary services provided by your telephone network provider, such as brokering, call waiting and conference facilities. These supplementary services can be used via the R-button.

Please contact your telephone network provider regarding which Flash time must be set to use the supplementary services. Contact your telephone network provider with regard to enabling supplementary services.

Appendix


Menu Structure

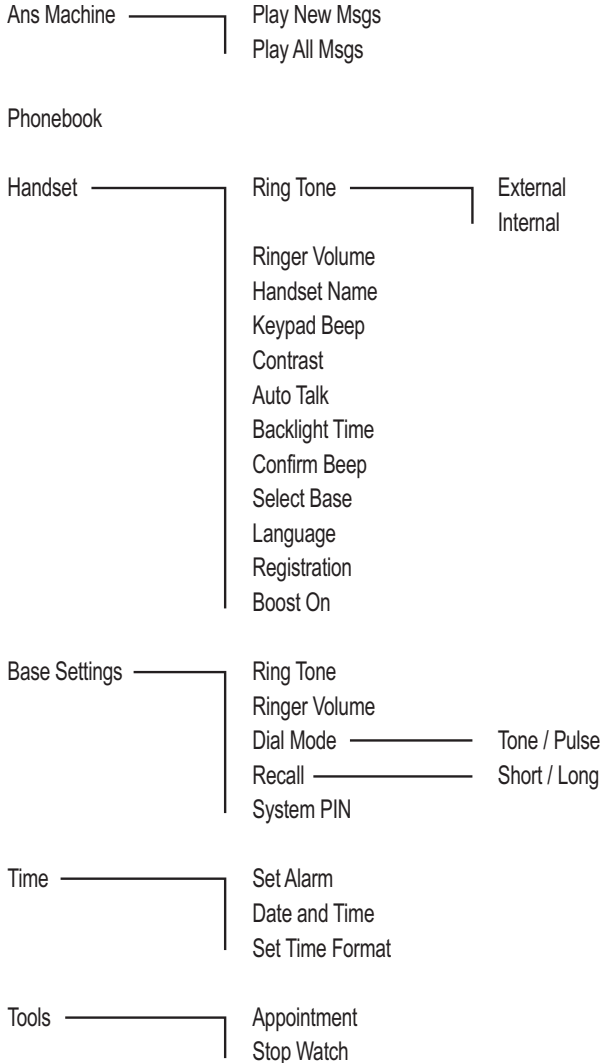

Help and support / Troubleshooting guide

Helpline

If you need some help and you're in the UK, please first check and see if your problem can be solved using the troubleshooting guide below. If it can't, please call us on 0844 800 6503 (using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary). Lines are open Monday to Friday, 9am to 5pm, excluding public holidays. If you've a claim on your 2-year guarantee, please contact your supplier.

 *Some issues may simply be resolved by disconnecting the power to the unit. In such instances the power to the main base station should be switched off and batteries in the handset should also be removed for about 20 minutes. After which reconnect everything to determine if this has resolved the issue.*

I can't make phone calls

- Make sure the phone cable is connected properly. If it is, there may be a fault. Please make sure you're using the phone cable that came with your phone.
- Check power's plugged in, switched on and working.
- Make sure you aren't too far from the base (in ideal conditions, it should work up to 300 metres outdoors and up to 50 metres indoors).
- Test the phone line and socket by using another phone.

I keep losing my connection

- Make sure you aren't too far from the base station (in ideal conditions, it should work up to 300 metres outdoors and up to 50 metres indoors).
- The base station may not be in an ideal location – consider moving it.

My handset keeps switching off

- It may need recharging. So it can charge fully, place your handset on its charger base for at least 16 hours (make sure the power socket is switched on!).
- Replace the rechargeable batteries. Any replacement batteries should be the same type as those provided.

Caller's identification (Call Line ID) isn't working

- Check you have this service on your phone line. Please call your network provider.
- The caller may have withheld their phone number.

My handset or base doesn't ring

- Check that the ringer is on. See pages 29 and 33.

I've got a buzzing noise on my radio, TV or computer

- We suggest you use your cordless handset at least one metre away from electrical equipment and mobile phones.

There is interference in the earpiece and/or internet connection is very slow when using the phone

- You must plug the phone into the wall socket via an ADSL filter if you have broadband internet on your phone line.

Technical data

Standard: DECT / GAP

Number of channels: 120 duplex channels

Frequencies: 1880 MHz to 1900 MHz

Duplex mode: Time division multiplex, 10ms frame length

Channel spacing: 1728 kHz

Bit rate: 1152 kBit / s

Modulation: GFSK

Voice encoding: 32 kBit / s

Transmitter power: 10 mW (average power per channel)

Range: up to 300 m outside, up to 50 m inside buildings

Electricity supply base station:

100~240 V AC, 7 V / 420 mA DC

Handset: Operating time: Stand-by time / Talk time

600 mAh = up to 100 h / up to 10 h

Charging time: approx. 16 hours

Operating temperature for handset operation:

5°C to 45°C ; 20 % to 75 % rel. humidity

Operating temperature for base station operation:

5°C to 45°C ; 20 % to 75 % rel. humidity

Storage temperature: -10°C to +60°C

Maximum earpiece volume: +30 dB (distortion < 2%)

Dial mode: Tone / Pulse

R-key: Flash (short/long)

Base station dimensions (mm): L / B / H = 140 x 115 x 63

Handset dimensions (mm): L / B / H = 55 x 28 x 170

Telephone line cord:

TSV on Pin 3 and 4 according to CTR 37 (Euro)

Adapter plug: European-type mains connector

Declaration of Conformity



This device fulfils the requirements stipulated in the EU directives:

- 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.
- 2005/32/EU directive “Energy-using products“.

Conformity with the above mentioned directives is confirmed by the CE symbol on the device.

To view the complete Declaration of Conformity, please refer to the free download available on our web site www.amplicomms.com

Maintenance

Clean the housing surfaces with a soft, fluff-free cloth.

Do not use any cleaning agents or solvents.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble free functioning and a long service life. The terms of the guarantee do not apply where the cause of the equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of the guarantee do not apply to the rechargeable batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies resulting from material of production faults which occur during the period of guarantee will be eliminated

free of charge. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee.

In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property.

Rights to compensation in the case of damage are excluded where there is no evidence or intent or gross negligence by the manufacturer.

If your equipment shows signs of defect during the period of guarantee, please return to the sales outlet in which you purchased the AMPLICOMMS equipment together with the purchase receipt. All rights to claims under the terms of guarantee in accordance with this agreement must be asserted exclusively with regard to your sales outlet.

Two years after the purchase of our products, claims under the terms of guarantee can no longer be asserted.

Index

3-Party Conference18

A

Alarm27

Answer delay43

Answering machine37

Answering machine on/off39

Appointment35

Auto Answer8, 30

Auto Talk8, 30

B

Backlight Time31

Base ringer volume33

Boost3, 32

C

Call list15, 21

Call screening41

Call timer16

Charging station6

Charging the batteries7

Confirmation Beep31

Connecting the base station6

D

Date8, 27

Declaration of Conformity54

Deleting messages on the base .41

Dial mode33

Direct call keys16, 26

Display contrast30

Display icons13

Display language32

Disposal4

E

Earpiece Volume3

Earpiece/loudspeaker volume ...20

Ending a call15

Equalizer20

G

Guarantee54

H

Handset name29

Handset ringer volume29

Help and support51

I

Inserting the batteries7

Installation location2

Intended use2

Interception41

Internal calls17

K

Key lock19

Keypad beep30

L		
Language8	
LED display39	
M		
Maintenance54	
Making a call14	
Medical equipment3	
Memo42	
Menu Structure50	
Muting the handset ringer19	
Muting the microphone16	
N		
Navigating in the menu12	
O		
Operating Elements9	
Outgoing message42	
P		
Package contents5	
PBX49	
Phone book16, 23	
PIN34	
Playback all messages40	
Playback messages on the base41	
Playback messages on the handset39	
Playback new messages40	
Power adapter plug2	
		Power failure2
R		
		Recall Time33
		Rechargeable batteries2
		Redial15
		Redial list22
		Registering/de-registering handsets47
		Remote operation46
		Ringer28, 33
S		
		Safety Information2
		Select OGM39
		Selecting the base station31
		Standby mode12
		Stopwatch36
		Supplementary services49
		Switching the handset ringer on/off 19
T		
		Taking a call14
		Technical data53
		Time8, 27
		Time format27
		Transferring an external call17
		Troubleshooting guide51
V		
		VIP Code44



Vertrieb: Audioline GmbH, D-41460 Neuss

Juli 2011 – Ausgabe 1.1

