

# Door Beacon

The Door Beacon produces a bright flashing light for several seconds when someone knocks on the door. It is vibration activated with a sensitivity switch for different situations.

## Fitting the battery

The battery compartment is in the bottom of the beacon. To remove the cover slide it in the direction of the arrow. Fit the battery to the connector, position the battery in the compartment and replace the cover.

The battery type required is an alkaline PP3, MN1604, 6LF22 or equivalent. Alkaline rather than standard batteries should be used with this product.

## Instructions for use

Your Door Beacon is supplied ready to use with battery and self-adhesive Velcro™ pads.

The beacon can be fitted to a door by using the Velcro™ pads supplied. The unit should be placed on the door at eye level. Fix the rough hook type Velcro™ pad to the back of the beacon and the smooth loop type to the door. Remove the backing paper from the Velcro™ pads to stick them to their respective surfaces. The beacon can also be hung from a hook on the back of the door, however the beacon must touch the door.

The beacon is switched on using the sensitivity switch on the side. Adjust this switch to suit your requirements. The 'HI' position will probably be needed on thick/heavy doors whilst the 'LO' position will be better for thin/light doors. The beacon will sometimes flash as it is switched on.

A little experimentation may be required each time the beacon is used in a different situation. The unit should be switched to the 'O' position when

not in use as a small amount of power is used even when the light is not flashing.

## Fault Finding

SYMPTOM	POSSIBLE CAUSE AND REMEDY
<b>Beacon not flashing at all</b>	Battery needs changing. Unit not switched on. Bulb needs replacing - return to supplier.
<b>Beacon sometimes works</b>	Unit switched to 'LO' when it needs to be on 'HI'. Beacon not touching door. Knock too soft.
<b>Beacon flashes with no knock</b>	Unit set to 'HI' when needs to be on 'LO'. Door is loose or not shut properly and is moving in a draught, etc. Very loud noises may vibrate the door enough to set beacon off.

When returning the unit for repair, please state the nature of the fault and the return address. If the unit is under guarantee please provide proof of purchase.



Product conforms to the provisions of the following

European Union Directives :

- 93/68 CE Marking Directive
- 89/336 & 92/31 Electro Magnetic Compatibility Directives

Sarabec Limited 15 High Force Road  
Middlesbrough TS2 1RH UK

Telephone (01642) 247789 Fax (01642) 230827 Text (01642)  
251310



is a registered mark of Sarabec Ltd

© Sarabec Ltd 203-105.003 0700 Door Beacon.doc