



chime flash

 
Doorbell Push Transmitter

Introduction

The chime flash Doorbell Push is a replacement or extra push that will pair to your chime flash receiver unit.

Product Overview


- 1) Push Button
- 2) Push Indicator
- 3) Mounting Bracket
- 4) Battery Cover
- 5) Battery Compartment

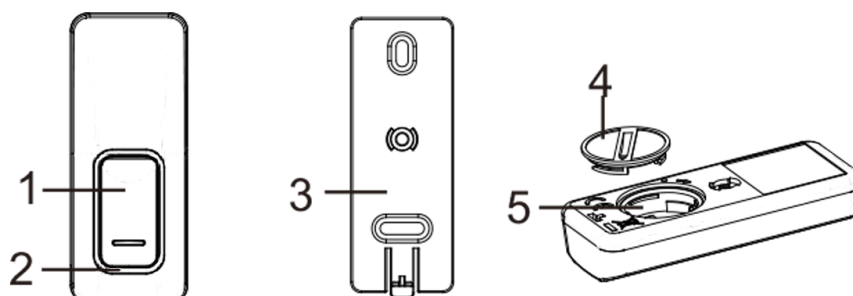

Installation


Push the locking tab slightly away from the transmitter and turn the wall bracket on the underside of the transmitter 90° to the plate. The bellpush can now be removed (pulled away) from the plate.

 Insert the supplied CR2032 battery as shown (Positive side upwards).

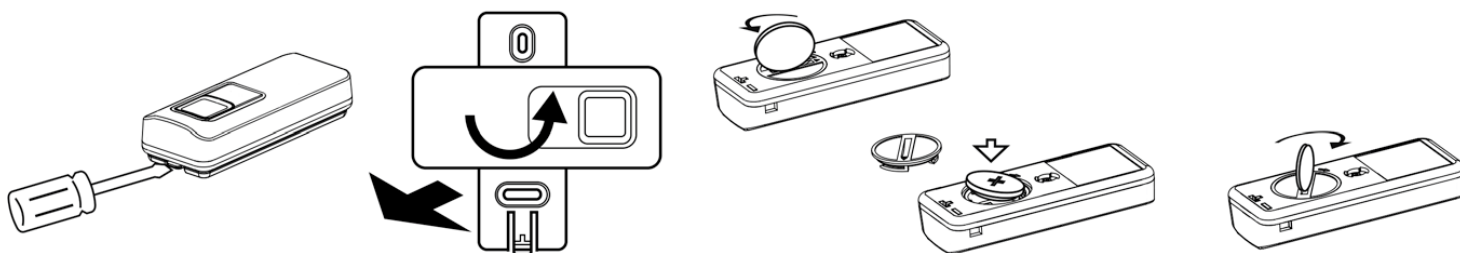

We recommend attaching the bellpush mounting plate to your door or frame using the sticky pad already attached. The provided screws and plugs can be used for fixing the bellpush to masonry.

 The Bellpush should be fitted to the mounting plate at a 90 degree angle and then rotated either clockwise or anti-clockwise until a click is heard.

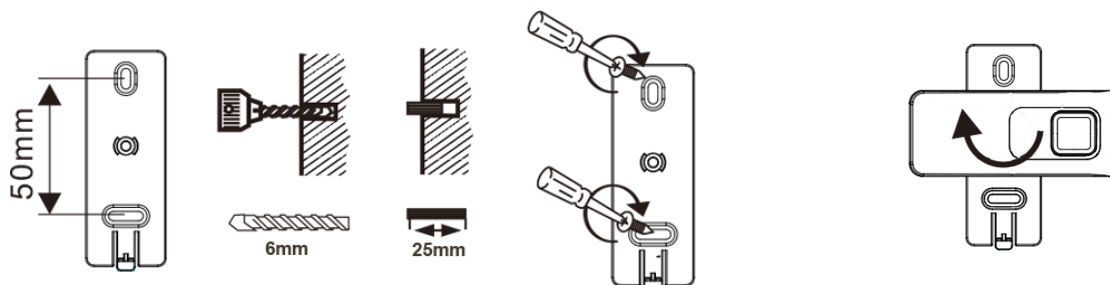



Care & Maintenance

This product may be cleaned with a soft, lint-free cloth. Do not use household cleaners or abrasives.

Disinfectant wipes, alcohol wipes or hydrogen peroxide wipes may be used to clean the outside casing of both the transmitter and receiver units. These wipes should be damp not wet and under no circumstances should any free liquid be used on the items that may enter any of the holes of the system components.

Programming & Setup

  - 1) Press & hold the setup button for 2-3 seconds, the green doorbell symbol will illuminate and flash at a steady rate.
- 2) Press the bellpush transmitter button, a single beep will be heard, and the orange symbol will start flashing, this indicates that the bellpush and receiver are now paired to the green symbol.
- 3) If you wish to add another transmitter, press the button on the second transmitter, a single beep will be heard and the green and orange symbols will now both be flashing. The second transmitter and receiver are now paired to the orange symbol.
- 4) Both the orange and green symbols will now be flashing, if a third transmitter is to be added press the third transmitter button, a single beep will be heard. The third transmitter is now paired to the third symbol which is shown as both the orange and green symbols indicating together.
- 5) The system will now be fully programmed.

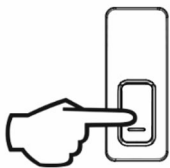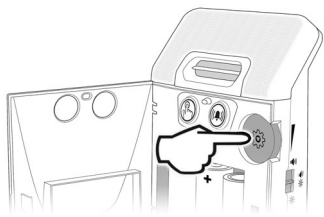

To advance to another symbol at any point, press the setup button once, multiple presses will cycle through the symbols until you exit the setup system.

 
Melody Selection

There are 8 melodies in total to choose from.

Press and hold the setup button for 2-3 seconds to enter setup mode, the green symbol will steadily flash. Release the setup button.

If this is the symbol you would like to change the melody of then simply rotate the setup button until you hear the sound you wish to keep. If you wish to change the sound on the orange symbol press the setup button once, the bell symbol will flash and follow the instructions above, repeat again for the third

Once the desired melody is selected press the setup button to exit the setup mode.

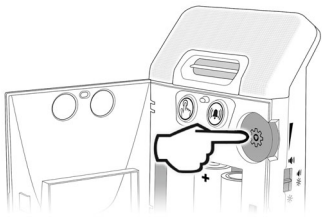

Sarabec Ltd 15 High Force Road Middlesbrough United Kingdom TS2 1RH Telephone: 01642 247789 email: mail@sarabec.co.uk website: www.sarabec.com Full system instructions available on our website. This item carries a 1 year guarantee, please contact your point of sale in the event of any issues.	Sarabec Ltd declares that chimeflash complies with all relevant UK Statutory Instruments. Sarabec Ltd declares that chimeflash complies with all relevant EU directives. Sarabec’s EU authorised representative: HUMANTECHNIK GmbH, Im Wörth 25, D-79576 Weil am Rhein , Germany. The full declaration of conformity for the Chimeflash is available from Sarabec Ltd.
--	--

The Wheelie bin logo is the industry wide symbol for this type of product. The symbol, when appearing on electronic product, indicates that the item should NOT be treated as ordinary household waste when due for disposal.

