

50dB



## Quick User Guide

En

Please refer to our website: [www.geemarc.com](http://www.geemarc.com) for an up to date user guide, as there may be important updates and changes you need to be aware of!

### Congratulations!

Congratulations on purchasing your **Geemarc AMPLIDECT COMBI 595** telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications- DECT standard) together with an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible. It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.

### Package contents


1 Telephone base, 1 Corded handset, 1 cordless Handset, 2 power adapters, 1 Charger, 1 Telephone line cord, 3 Ni-Mh batteries, 1 Quick user guide.

### Installation

#### Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).  
Connect the handset curly cord to the base (E).  
Connect the power adapter jack to base and charger (C) then connect the power adapter plug in mains power (D).

**NOTE:** Use only the power adapters supplied with the phone.

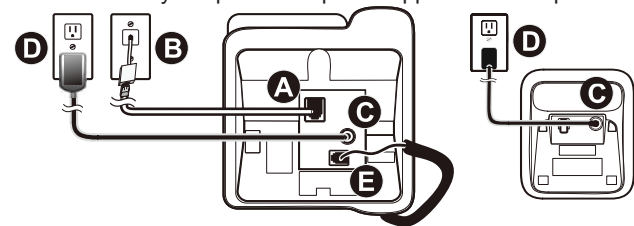

#### Connecting the battery

Slide the battery cover downwards Install the 3 batteries into the socket as indicated, matching correct polarity (+, -).


Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

### Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

### Overview

#### Base overview

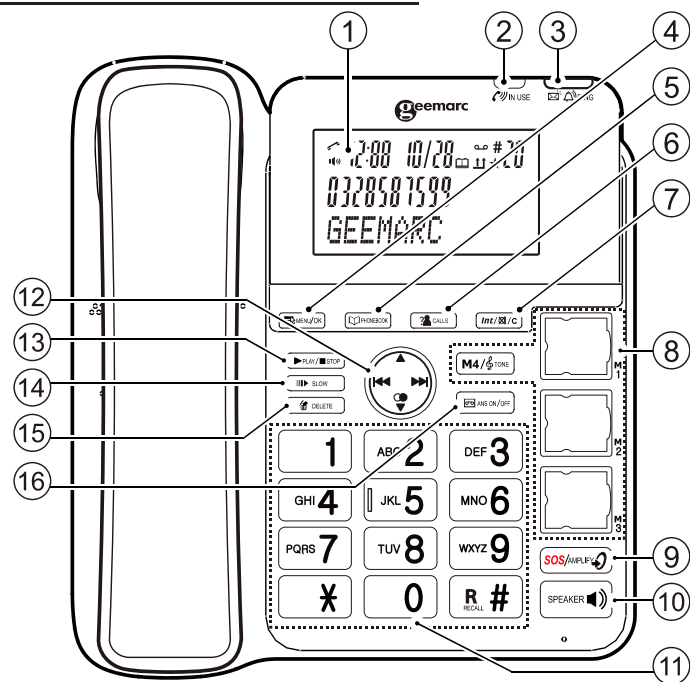


1	<b>LCD DISPLAY</b>
2	<b>IN USE :</b> ON during a call.
3	<b>RING light</b> <ul style="list-style-type: none"><li>Flashes when there is an incoming call.</li><li>Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.</li></ul>
4	<b>MENU / OK</b> <ul style="list-style-type: none"><li>In idle mode: Press to access the main menu.</li><li>In sub-menu mode: Press to confirm the selection.</li><li>In Redial list/Call list: Press to store the number into Phonebook.</li></ul>
5	<b>PHONEBOOK:</b> <ul style="list-style-type: none"><li>In idle: Press to access the phonebook.</li></ul>
6	<b>CALLS (CALL LIST)</b> <ul style="list-style-type: none"><li>In idle mode: Press to access the call list.</li></ul>
7	<b>Int/ / C INT / MUTE / CLEAR</b> <ul style="list-style-type: none"><li>In main menu mode: Press to go back to idle screen.</li><li>In sub-menu mode: Press to go back to previous level.</li><li>In sub-menu mode: Press and hold to go back to idle screen.</li><li>In editing / predialing mode: Press to clear a character/digit.</li><li>In editing / predialing mode: Press and hold to delete all the character / digits.</li><li>During a call: Press to mute / unmute the microphone.</li><li>In ringing: Press to silence the base ringer.</li><li>In idle mode: Press to intercom another system handset.</li></ul>
8	<b>MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 TONE KEY - M4)</b> <ul style="list-style-type: none"><li>In idle mode: Press to dial out to the number stored in the memory key.</li><li>During a call: press M4 to increase the high frequency or the low frequencies.</li></ul>
9	<b>SOS/AMPLIFY VOLUME BOOST / SOS</b> <ul style="list-style-type: none"><li>During a call: Press to activate/deactivate the VOLUME BOOST function.</li><li>In idle mode: Press and hold for 2 seconds to launch the emergency calling sequence set in your phone.</li><li>In SOS mode: press and hold for 2 seconds to stop the emergency call.</li></ul>
10	<b>SPEAKER</b> <ul style="list-style-type: none"><li>In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.</li></ul>
11	<b>ALPHANUMERIC KEYPAD, STAR (*), HASH/RECALL (#/R)</b> <ul style="list-style-type: none"><li>In predial or editing mode: Press to insert a digit.</li><li>0 key in predial or editing mode: Press and hold to insert a pause.</li><li>On line: Press the key R/# to make a recall.</li></ul>

### 12 NAVIGATION KEYS

- ▲ UP**
  - In menu mode: Press to scroll up the menu items.
  - In Phonebook list / Redial list / Call list: Press to scroll up the list.
  - In editing mode: Press to move the cursor one character to the right.
  - During a call or TAM message playback: Press to increase the volume.
- ◀ REPEAT / OGM**
  - In Idle mode: Press and hold 2 sec until beep to record OGM.
  - Press ▶/■ to stop the recording.
  - In TAM message playback mode: Press to go back to previous message.
- ▶ MEMO / SKIP FORWARD**
  - In Idle mode: Press and hold 2 sec until beep to record a memo and press ▶/■ to stop the recording.
  - In TAM message playback mode: Press to skip to next message.
- ▼ DOWN / REDIAL LIST**
  - In Idle mode: Press to access the redial list.
  - In menu mode: Press to scroll down the menu items.
  - In Phonebook list / Redial list / Call list view mode: Press to scroll down the list.
  - In editing mode: Press to move the cursor one character to the left.
  - During a call or TAM message playback: Press to decrease the volume.
- ▶/■ PLAY / STOP**
  - In Idle mode: Press to playback messages.
  - During TAM message playback: Press to stop playing messages.
- || SLOW**
  - During TAM MSG playback: Press to playback messages in slow speed.
- 🗑️ DELETE**
  - In TAM message playback mode: Press to delete the current TAM message playback.
  - In idle mode: Press and hold to delete all old messages.
- 📞 ANS ON / OFF**
  - In Idle: Press to switch the answering machine ON or OFF.
  - The cassette tape icon is displayed on the screen if activate.

### Handset overview

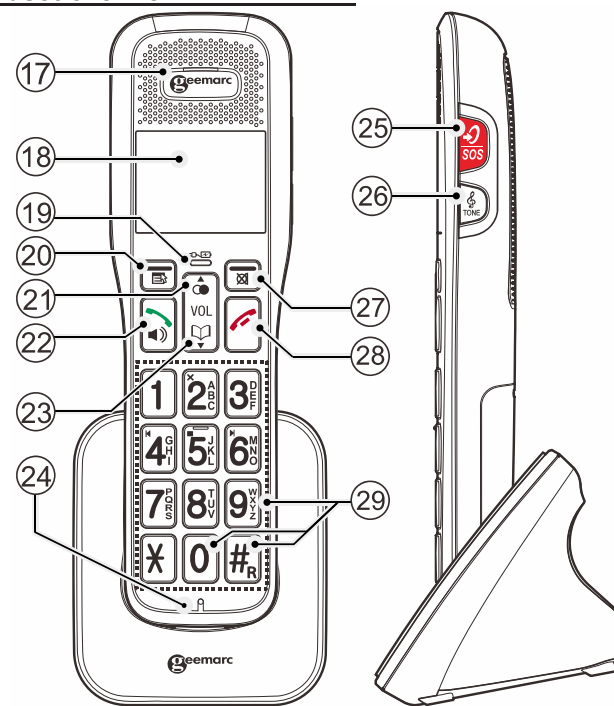

17	<b>EARPIECE</b>
18	<b>LCD DISPLAY</b>
19	<b>CHARGE LIGHT</b> <ul style="list-style-type: none"><li>Steadily on when the handset is charging in the charger.</li></ul>
20	<b>MENU / OK</b> <ul style="list-style-type: none"><li>In idle mode: Press to access the main menu.</li><li>In sub-menu mode: Press to confirm the selection.</li><li>During a call: Press to access Intercom/ Phonebook / Redial list /Call log/Record call.</li></ul>

21	<b>▲ UP / CALL LIST</b> <ul style="list-style-type: none"><li>In idle mode: Press to access the redial list.</li><li>In menu mode: Press to scroll up the menu items.</li><li>In phonebook list / redial list / call list: Press to scroll up the list.</li><li>In editing mode: Press to move the cursor one character to the right.</li><li>During a call: Press to increase the listening volume.</li><li>During ringing: Press to increase the ringer volume.</li></ul>
22	<b>TALK ON / SPEAKERPHONE</b> <ul style="list-style-type: none"><li>In idle/pre-dial mode: Press to make a call in earpiece mode.</li><li>In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode.</li><li>During ringing: Press to answer a call in earpiece mode.</li><li>On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.</li></ul>
23	<b>▼ DOWN / PHONEBOOK</b> <ul style="list-style-type: none"><li>In idle mode: Press to access the phonebook.</li><li>In menu mode: Press to scroll down the menu items.</li><li>In phonebook list / redial list / call list: Press to scroll down the list.</li><li>In editing mode: Press to move the cursor one character to the left.</li><li>During a call: Press to decrease the listening volume.</li><li>During ringing: Press to decrease the ringer volume.</li></ul>
24	<b>MICROPHONE</b>
25	<b>SOS VOLUME BOOST / SOS</b> <ul style="list-style-type: none"><li>During a call: Press to activate/deactivate the VOLUME BOOST function.</li><li>In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset.</li><li>In SOS mode: press and hold for 2 seconds to stop the emergency call.</li></ul>
26	<b>📞 TONE</b> <ul style="list-style-type: none"><li>During a call: Press this key to increase the high frequency or the low frequencies.</li></ul>
27	<b>📞 CANCEL / MUTE</b> <ul style="list-style-type: none"><li>In main menu mode: Press to go back to idle screen.</li><li>In sub-menu mode: Press to go back to previous menu.</li><li>In editing/pre-dial mode: Press to delete a character / digit.</li><li>In editing/pre-dial mode: Press and hold to delete all the characters / digits.</li><li>During a call: Press to mute/resume the microphone.</li><li>In idle mode: Press to intercom another handset.</li></ul>
28	<b>📞 TALK OFF</b> <ul style="list-style-type: none"><li>During a call: Press to end a call and go back to idle screen.</li><li>In menu / editing mode: Press to go back to idle screen.</li><li>During ringing: Press to silence the handset ringer.</li></ul>
29	<b>ALPHANUMERIC KEYPAD, STAR (*), 0, and HASH/RECALL (#/R)</b> <ul style="list-style-type: none"><li>In predial or editing mode: Press to insert a digit / character * and #.</li><li>During a call: Press and hold #<sub>R</sub> to make a Flash (Recall).</li><li>0 key in idle / pre-dial mode / number editing mode: Press and hold to insert a pause.</li></ul>

### First use of your telephone

#### First use of your handset

After you have inserted the batteries, the display asks you to select your text language with the keys ▼/▲, press **MENU/OK** to valid.

Then enter the date with the keypad and validate by pressing **MENU/OK**.

Then enter the correct hour with the keypad and validate by pressing **MENU/OK**.

Then select your talking language with the keys ▼/▲, press **MENU/OK** to valid.

#### General menu setting

The phone settings are always set in the same manner:

Press **MENU/OK** button to open the main menu.

Then use ▼/▲ buttons to select an entry and confirm it by pressing the **MENU/OK** button.

The factory preset PIN code is **0000**. Example:

#### Set the display language on the base

Press **MENU/OK**, then select ▼/▲ language, press **MENU/OK**,

then select ▼/▲ desired language and then press **MENU/OK** to confirm.

#### Set the language on the handset

Press **MENU/OK**, then select ▼/▲ HS settings, press **MENU/OK**, then select ▼/▲ language, press **MENU/OK**, then select ▼/▲ desired language and then press **MENU/OK** to confirm.

### Menu setting

#### Base menu

**CALL LOG:** ► Incoming call list  
**PHOTO MEM:** ► M1 ► M2 ► M3 ► M4  
**PHONEBOOK:** ► ALL ► SPEED DIAL ► VIP  
**CALL BLOCK:** ► BLACK LIST ► SETTINGS(BLOCK MODE-W/O NUM)  
**INTERCOM:** HANDSET 1-2-3 or ALL  
**DATE & TIME:** ► DATE FORM ► TIME FORM ► SET DATE  
**TEXT LANG:** ► ENGLISH ► FRANÇAIS ► DEUTCH ► ITALIANO ► NEDERLANDS ► ESPANOL ► PORTUGUES...  
**BS SETTING:** ► RING SETUP ► KEY TONE ► FLASH TIME ► FIRST RING ► DEFAULT  
**PAGE ALL HS REGISTER**  
**SET SOS:** ► SOS NUMBER ► SOS MSG ► SOS LANG  
**REMINDER:** ► ALARM 1 ► ALARM 2 ► ALARM 3 ► ALARM 4 ► ALARM 5 ► ALARM 6 ► ALARM 7 ► ALARM 8 ► ALARM 9 ► ALARM 10  
**TLK DIGITS:** ► OFF ► ON  
**ANS. SYS:** ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF ► SET TAM (TAM LANG, CALL SCREEN, TAM MSG, ANS. DELAY, REC. TIME, REMOTE ACC, CHANGE PIN, MSG ALERT)

#### Handset menu

**CALL LOG:** ► RECEIVED  
**PHOTO MEM:** ► M1 ► M2 ► M3 ► M4  
**PHONEBOOK:** ► ALL (ADD-VIEW-EDIT-DELETE-DELETE ALL-ADD VIP-ADD TO PM-ADD TO SD-STATUS) ► SPEED DIAL ► VIP  
**CALL BLOCK:** ► BLACK LIST ► SETTINGS(BLOCK MODE-W/O NUM)  
**INTERCOM:** ► BASE or HANDSET X  
**BS SETTING:** ► BS RINGER ► RING VOL ► FLASH TIME ► FIRST RING  
**HS SETTING:** ► RING SETUP ► TONE SETUP ► AUTO BOOST ► TEXT LANG ► DATE & TIME ► REGISTER ► DEFAULT  
**SET SOS:** ► SOS NUMBER ► SOS MSG ► SOS LANG  
**REMINDER:** ► ALARM 1 ► ALARM 2 ► ALARM 3 ► ALARM 4 ► ALARM 5 ► ALARM 6 ► ALARM 7 ► ALARM 8 ► ALARM 9 ► ALARM 10  
**TLK DIGITS:** ► ON ► OFF  
**ANS. SYS:** ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF ► SET TAM (TAM LANG, CALL SCREEN, TAM MSG, ANS. DELAY, REC. TIME, REMOTE ACC, CHANGE PIN, MSG ALERT)

#### Registration

**NOTE:** Handset and base station are pre-registered. Up to four handsets can be registered to a single base station.

#### Registration a handset

On Base: Press **MENU/OK**, select ▼/▲ REGISTER.  
Press **MENU/OK** to see REGISTERING... (If the registration is successful, there will be a confirmation beep).

On Handset: Press **MENU/OK**. Use ▼/▲ to select HS SETTING.

Press **MENU/OK**. Use ▼/▲ to select REGISTER.

Press **MENU/OK** and REGISTERING is display.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

### Intercom

#### Internal Call

On Base: Press **Int/ / C**, and ▼/▲ to select HS 1 - 4.

Press **MENU/OK** to call the handset.

On Handset: Press **CANCEL MUTE**, and ▼/▲ to select the desired handset number, Base or ALL and press **MENU/OK**.

#### Call All Handsets

Base: Press **Int/ / C**, and ▼/▲ to select ALL, press **MENU/OK** to connect.

On Handset: Make point 1 in chapter internal call and choose ALL.

#### Transfer an External Call

On Base: Press **MENU/OK** twice, and ▼/▲ to select handset

number, press **MENU/OK** on handset. After connection quit the call on base.

