



QUICK USER GUIDE

En

!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

PACKAGE CONTENTS

1 Telephone base, 1 cordless Handset, 1 power adapter, 1 Telephone line cord, 3 NiMh batteries, 1 Quick user guide.

INSTALLATION

Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).

Connect the power adapter jack to the base (C) then connect the power adapter plug to the mains power (D).

Note: Use only the power adapters supplied with the phone.

Connecting the battery

Slide the battery cover downwards.

Install the 3 batteries into the socket as indicated, matching correct polarity (+,-).

Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

OVERVIEW

Base

1. /HANDSET LOCATOR

While the phone is idle, press to page all handsets.

2. /ANS ON

Press to turn the built-in answering system on or off.

The system will flash to show that there is a new message.

3. MESSAGE COUNTER

Display the number of messages recorded.

4. /PLAY/STOP: Press to start or stop message playback.

5. /DELETE

Press to delete the message currently playing.

Long press to delete all old messages when the phone is not in use.

6. VOL (▲)

During message playback, press to increase the listening volume.

While in idle mode, press to increase the base ringer volume.

7. VOL (▼)

During message playback, press to decrease the listening volume.

While in idle mode, press to decrease the base ringer volume.

8. /SLOW

During message playback, press the key to slow the listening speed.

9. IN USE

ON when handsets are in use, or when the answering system is answering an incoming call.

10. /REPEAT

During message playback, press to repeat a message.

Press twice to play the previous message.

Handset

11. EARPIECE

12. LCD DISPLAY

13. CHARGE LIGHT ()

Continuously on when the handset is charging in the charger.

14. MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call log.

15. UP/CALL LIST (▲)

In idle mode: Press to access the redial list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

16. TALK ON () SPEAKERPHONE ()

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.

17. DOWN/PHONEBOOK ()

In idle mode: Press to access the phonebook.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

18. MICROPHONE

19. VOLUME BOOST/SOS ()/SOS

During a call: Press to activate/deactivate the VOLUME BOOST function.

In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset.

In call mode: press and hold for 2 seconds to stop the emergency call.

20. TONE

During a call: press this key to increase the high frequency or the low frequencies.

21. CANCEL/MUTE ()

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

In editing/pre-dial mode: Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters / digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom another handset.

22. TALK OFF ()

During a call: Press to end a call and go back to idle screen.

In menu/editing mode: Press to go back to idle screen.

23. ALPHANUMERIC KEYPAD, STAR (*), HASH (#R)

In pre-dial or editing mode: Press to insert a digit / character /*/#.

#R during a call: Press and hold to make a Flash (Recall).

0 key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.

FIRST USE OF YOUR HANDSET

After you have inserted the batteries, the display asks you to select your language with the keys ▼/▲(15/17), Press MENU/OK (14) to valid, ten enter the date with the keypad and validate by pressing MENU/OK (14).

Enter the correct hour with the keypad and validate by pressing MENU/OK (14).

MENU SETTING

The phone settings are always set in the same manner:

Press MENU/OK (14) button to open the main menu. Then use the ▼/▲ buttons to select an entry and confirm it by pressing the MENU/OK (14) button.

Handset

CALL LOG

►VIEW LIST

Under entry: DETAILS ►ADD TO PB ► ADD TO BL ► ADD TO PM ► DELETE ►DELETE ALL

PHOTO MEM: M1 to M4

PHONEBOOK

►ALL ►SPEED DIAL ►VIP

Under entry: ►ADD ►VIEW ►EDIT ►DELETE ►DELETE ALL ►ADD VIP ► ADD TO PM ►ADD TO SD ►STATUS

CALL BLOCK

BLACK LIST (under entry: ►ADD ►VIEW ►EDIT ►DELETE ►DELETE ALL ► ADD TO PM ►STATUS) ►SETTING (BLOCK MODE ►W/O NUM)

INTERCOM: ►HANDSET* ►BASE ►ALL

BS SETTINGS

►BS RINGER ►RING VOLUME ►FLASH TIME ►FIRST RING

HS SETTINGS

►RING SETUP ►TONE SETUP ►AUTO BOOST ►TEXT LANG ►DATE & TIME ►REGISTER ►DEFAULT

SET SOS: SOS NUMBER ►SOS MSG ►SOS LANGUAGE

REMINDER

►ON/OFF (ALARM 1 TO 10) ►(ONCE/DAILY/MON-FRI/SAT-SUN)

TLK DIGITS: ►ON ►OFF

ANS. SYS.

►PLAYBACK ►DEL OLD ►MEMO ►TAM ON/OFF ►SET TAM (TAM LANG ► CALLSCREEN, TAM MSG, ANS. DELAY, RECORD TIME, REMOTE ACC, CHANGE PIN ► MSG ALERT)

SET DEVICE: CHECK SIGNAL ►DOORBELL

DEVICES DOORBELL ►ALERTER (STATUS) ►LOG ►RENAME

HANDSET REGISTRATION

Note: Handset and base station are pre-registered.

Up to four handsets can be registered to a single base station.

Registering a handset

On Base: press and hold /HANDSET LOCATOR(1) on the base until you hear a beep to enter the registration mode.

At the same time On Handset: Press MENU/OK (14) Use ▼/▲ (15/17) to select HS SETTING and Press MENU/OK (14).

Use ▼/▲(15/17) to select REGISTER, Press MENU/OK (14) and REGISTERING will be displayed.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

INTERCOM

See the user guide of the additional handset

ADDITIONAL DEVICES

You can also register up to 4 handsets, 3 doorbells and several alerters on the AD595 ULE. All the devices are connected in factory if it is sell in pack, no need to make the procedure to register one device.

To pair one doorbell or alerter, please read the user guide of your device.

SET DEVICE

Press MENU/OK (14) and ▲/▼ to select SET DEVICES.

CHECK SIGNAL:

DOORBELL: Press MENU/OK (14) and on the doorbell button to check the quality of the signal.

ALERTER: Press MENU/OK (14) to check the quality of the signal.

DOORBELL:

This function is to set:

CHIME: In this function, you can set the doorbell melody and volume when you press the doorbell button.

RECORD?: Set ON to record the conversation with the doorbell.

DBELL DVRT :

This function allows you to transfer the doorbell alert at one phone number set in manual or automatic.


DVRT MODE: allows to activate the function in manual, automatic or OFF.

PRESET NUM: allows you to enter the phone number for transfer..

DEVICES

In this menu, you can check:

Base / Handset

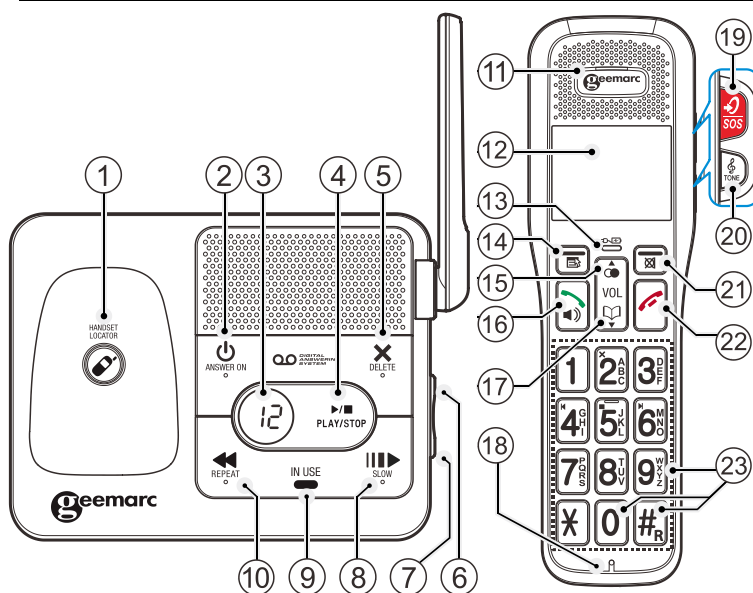

Connection base

