



How to Use Bluetooth

Pair with a Bluetooth Device

- Before you can use this product through Bluetooth, it needs to be paired with your device.
- 1. Long Press the abutton for 3 seconds until the LED Status Light [4] starts to flash red and blue alternately.
- 2. Switch on Bluetooth on your phone or other Bluetooth enabled device.
- 3. Search and select "Snoozeband Deluxe" from the list of found devices.
- 4. If a pass code is asked, enter "0000".
- 5. After paired successfully, the blue light will flash slowly for 10 seconds.
- 6. When switched on next time, it will automatically search for and attempt to connect with the last paired device.

Pair with a New Bluetooth Device

- Follow below steps to pair with a new Bluetooth device:
- 1. Make sure the product is disconnected with the previous paired device. 2. Follow "How to Pair with a Bluetooth Device" instructions from step 1.
- NOTE: To save power, it will switch off automatically if there's no Bluetooth connection for 3 minutes.

Playing Music

1. Play/Pause: Short Press the @ button to play or pause music. 2. Adjust Volume: Short Press the @ button or @ button to volume up or down

- 3. Music selection: Long Press the 🗢 button or 🛛 button to select previous or next songs.
- NOTE: Play/Pause and Music Selection functions will only work on devices which support Bluetooth profile AVRCP.

How to Set Timer

You can set the timer to 60, 120 or 180 minutes.

1. Double press the button 🛛 to set time of 60, 120 and 180 min. Solid red light means 60 min, solid blue light means 120 min, solid green light means 180 min. 60 min, 120 min, 180 min, clean timer setting, 60 min, 120min ... it repeats this cycle 2. The corresponding light will be on for 10 seconds to remind the set time. 3. It will double flash green light when the timer setting is cleaned. NOTE: In Bluetooth mode, if there's no device connected, the timer will not work. In White Noise mode, the timer is always working.

How to Use White Noise

It comes with 20 soothing sounds and 4 relaxing music. Birds, Brook, Ocean Wayes, Wind, Thunder, Rain Drops, Summer Night, Frogs, Crickets, Bonfire, Coffee House, Fan, Train, Keyboard, Clock, Wind Chimes, White Noise, Pink Noise, Brown Noise, Piano,

- 1. Long Press the @button for 3 seconds until the LED Status Light [4] starts to flash red and blue alternately.
- 2. Double Press the © button in quick succession to enter White Noise mode.
- 3. Short Press the @ button to play or pause sound/music.
- 4. Long Press the @ button to select next sound/music. Long Press the @button
- 5. Short Press the @ button to volume up. Short Press the @ button to volume
- NOTE: 1. At any time, you can Double Press the Obutton to switch between White Noise mode and Bluetooth mode.
 - In White Noise mode, the Bluetooth will be disconnected.

How to Charge

Make sure the product is switched off, open the zipper on the eye mask and

other end to a power source like PC or mains charger. 2. The LED Status Light [4] will turn to red whilst charging. It will turn to blue as soon as the battery is fully charged. NOTE: 1.It will take approx. 2 hours to be fully charged.

you will see the Charging Port [5] . Then:

2.If the product is under using, it will stop working when charging. 3. If the product is crashed, it will reset when charging.

I. Connect the Type C USB Charging cable to the Charging Port [5] and the

I FD Indicators

STATUS	INDICATOR		
Bluetooth Pairing Mode	Flashing red and blue lights		
Bluetooth Connected	Blue light flashs slowly for 10 seconds		
White Noise Mode	Blue light flashs twice slowly for 10 seconds		
60min Timer	Solid red light for 10 seconds		
120min Timer	Solid blue light for 10 seconds		
180min Timer	Solid green light for 10 seconds		
Timer Setting Cleaned	Double flash green light		
Charging	Solid red light		
Charging Complete	Solid blue light		

How to Roll Up the Snoozeband



Step 1: Turn the pocket inside out, the velcro will be hidden and you will see the roll-up strap Step 2: Roll up the eye mask

Step 3: Tie the eye mask with the strap

Troubleshooting

If you cannot connect the product with your device, please try the following:

- 1. Ensure the product is charged, switched on, paired with and connected to your device.
- Check if the product is in the effective range from your device and there's no obstructions like walls or other electronics devices between the product and the device.
- 3. Only one device can be connected with the product at a time, ensure there's no other Bluetooth device already connected with the product.
- 4. If you receive an intermittent signal, please ensure the product is in the effective range from your device.

Washing Guidelines

Please remove the electronic components from the Eve Mask before washing. Hand wash only.

1	Wash with cold water	\otimes	DO NOT dry clean
\square	Hand wash ONLY		DO NOT bleach
\boxtimes	DO NOT tumble dry	\ge	DO NOT iron

Specifications

BT Version: V5.2 Frequency: 2.402 Ghz - 2.480Ghz Transmission Range: 20M / 66FT Rated Power: RMS 10mW X 2 Speaker Unit: 32Ω / 20mm Battery: 3.7V 180mAh Rechargeable Li-polymer Battery Charge Time: 2 Hours

Package Contents

- × Snoozeband Deluxe
- x Type C USB Charging Cable
- 1 x User Manual



Step 3

WARNING: Avoid excessive volumes, particularly over extended periods or in the case of frequent use. Listening to music at maximum volume for prolonged periods can lead to hearing damage. It's best to avoid extreme volume when using this product, especially for extended periods. For your own safety, please be aware of your surroundings when using this product.

