

Sarabec Chimeflash v2 – Quick Start Guide





1. What's in the Box

Receiver, Bell push (with mounting plate), 1 × CR2032 battery, 3 × “C” batteries, Screws + fixings.


2. Install Batteries

Receiver: Insert 3 × “C” alkaline batteries. Bell push: Open cover with coin → insert CR2032 (positive side up).

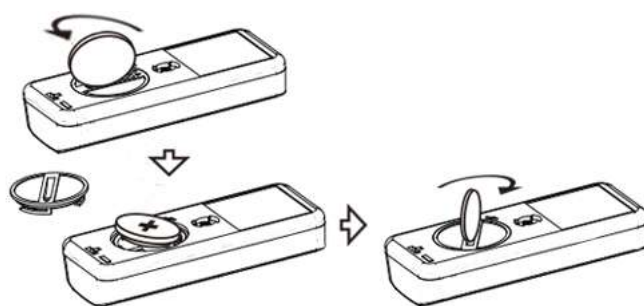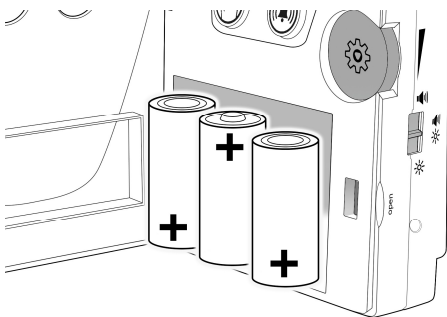

3. Mounting

Bell push: Stick mounting plate with attached sticky pad (or screws). Attach at 90° and twist until click.

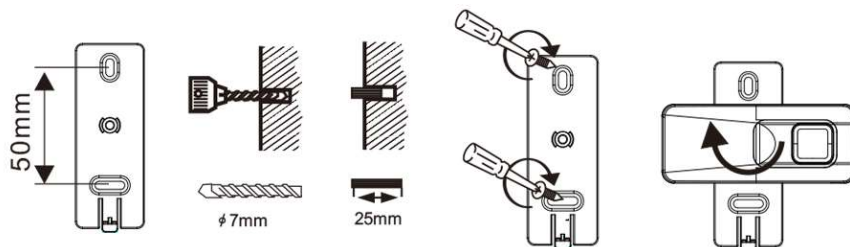

Receiver: Portable but can be wall mounted with screws (Optional).

4. First Use

System is pre-programmed. Works once batteries are installed.

5. Choose Melody

Hold Setup 2–3 sec → rotate to select from 8 melodies → press Setup to confirm.

6. Adjust Volume

8 levels (beeps = level, double beep = max). Change anytime (not in setup).

7. Alert Type

Slide switch: Sound only / Flash only / Sound + Flash.

8. Stop Alerts

Press Accept button to silence.

9. Adding other transmitters

Other transmitters can be paired to the receiver.

Press and hold the setup button on the receiver until the green light starts to flash and release the setup button.

Press the same setup button once and the orange light will start flashing, now press the button on the transmitter you want to add. The receiver will acknowledge the button press and the green and orange lights will now be flashing.




If you are adding another a third transmitter to the receiver, press the button on the third transmitter, the receiver will acknowledge the pairing, and all lights will stop flashing.

N.B a maximum of three transmitters can be paired to a receiver, however an unlimited number of receivers can be paired to a transmitter.

10. Troubleshooting

Red light + quiet sound: replace receiver batteries. Symbol flashing: replace CR2032. Random triggers: reset transmitter. Bell push stuck: push tab & twist.

11. Useful Accessories

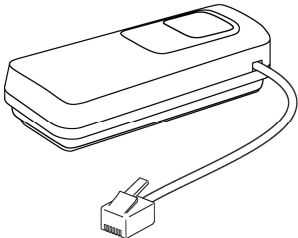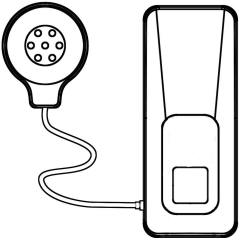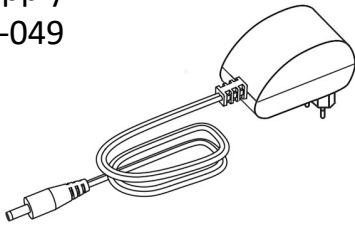Telephone Transmitter Order Code 150-024 	Audio Transmitter. Order Code 150-028 
Replacement/Additional Bellpush. Order Code 150-021 	Mains Power Supply. Order Code 150-049 

For full details please see the enclosed instruction leaflet.

Additional Accessories can be purchased from Sarabec Ltd

www.sarabec.com

Rev1 Sept 25